

My First Real Piano



Owner's Manual

Please keep these instructions for future reference
as they contain important information.

Unit requires two AAA size batteries for operation (batteries included).

Adult installation is required for battery replacement.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.


CAN ICES-3 (B)/NMB-3(B). This Class B digital apparatus complies with Canadian ICES-003.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Battery Information

Adult Installation Required

1. Open the battery compartment door on the bottom of unit by removing the screw with a screwdriver (not included) and lift up.
2. Insert two (2) "AAA" size batteries (included) following the polarity marked inside the battery compartment.
3. Replace the battery compartment door and screw with a screwdriver.

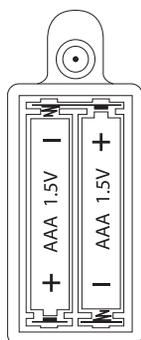

Battery Precautions


Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon zinc) or old batteries with fresh ones.
4. If the batteries in the device are weak/dead or if the device will not be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)
6. Do not dispose of batteries in a fire; batteries may leak or explode.
 - Rechargeable batteries are to be removed from the toy before being charged,
 - Rechargeable batteries are only to be charged under adult supervision,
 - The supply terminals are not to be short-circuited.

Care and Maintenance

1. Keep the piano surface clean by wiping with a soft dry cloth.
2. Keep the piano away from direct sunlight or excess heat sources.
3. Remove batteries when the piano is not in use for an extended period of time.
4. Do not expose the piano to moisture or water, and do not drop on hard surface.
5. The product is designed for indoor play only.

Location of Control

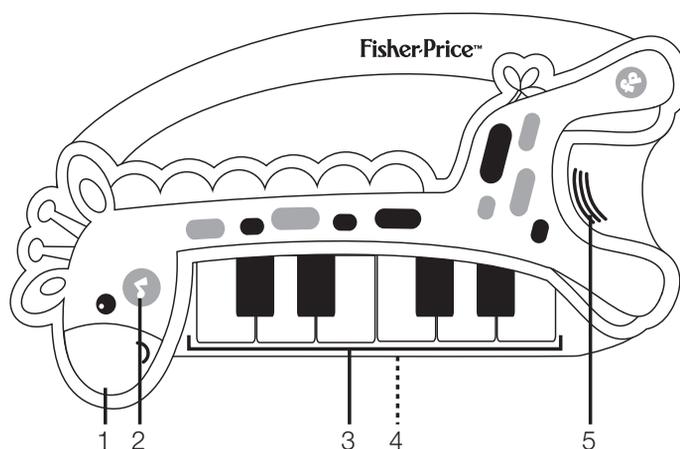

1. Flashing Light
2. Mode Button
3. Keyboard Buttons
4. Battery Compartment (rear of unit)
5. Speaker

Operating the Keyboard

1. Press any button to turn the unit on.
2. Press the Keyboard buttons to play the notes and the Giraffe's nose will flash with each press.
3. Press the Mode button to play a demo melody. Press again to pause; the light will flash. When in the Pause mode, press the Mode button again to go to the next melody. Double press the Mode button to go to next demo melody when a demo melody is playing. The demo melody will play once and stop when completed. Press the Keyboard buttons to play along with the melody as One Key One Note. There are a total of five demo melodies.

Auto Shut Off

To preserve the batteries, this unit will automatically go into Standby mode when not in use. Press any button to use the unit again.

Troubleshooting

If operation malfunction occurs, please follow these steps:

1. Remove all the batteries in the battery compartment.
2. Let the unit stand for a few minutes, then replace the batteries.
3. If the unit is still not working properly, replace all the batteries with fresh ones.

**To obtain service on your product,
Please contact Kids Station Toys at
1888-321-7191, or
email at service@kidsstationtoys.com**