

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


CAN ICES-3 (B)/NMB-3(B). This Class B digital apparatus complies with Canadian ICES-003.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Battery Information

Adult Installation Required.

1. Open the battery compartment door on the rear of unit by removing the screw with a screwdriver (not included) and lift up.
2. Insert two (2) "AA" size batteries (included) following the polarity marked inside the battery compartment.
3. Replace the battery compartment door and screw with a screwdriver.

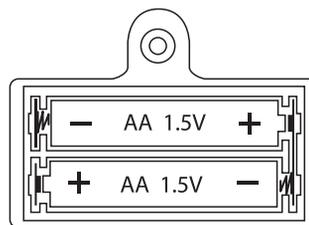

## Battery Precautions

Follow these precautions when using batteries in this device:

1. Use only the size and type of batteries specified.
2. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
3. Do not mix different types of batteries together (e.g. Alkaline and Carbon zinc) or old batteries with fresh ones.
4. If the batteries in the device are weak/dead or if the device will not be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)
6. Do not dispose of batteries in a fire; batteries may leak or explode.
  - Rechargeable batteries are to be removed from the toy before being charged,
  - Rechargeable batteries are only to be charged under adult supervision,
  - The supply terminals are not to be short-circuited.

## Care and Maintenance

1. Keep the product surface clean by wiping with a soft dry cloth.
2. Keep the product away from direct sunlight or excess heat sources.
3. Remove batteries when the product is not in use for an extended period of time.
4. Do not expose the product to moisture or water, and do not drop on a hard surface.
5. The product is designed for indoor play only.

## Recycle Note

When this product has reached the end of its useful life, it should not be disposed of with other household waste. The Waste Electrical and Electronic Equipment Regulation require it to be separately collected so that it can be treated using the best available recovery and recycling techniques. This will minimize the impact on the environment and human health from soil and water contamination by any hazardous substances, decrease the resources required to make new products and avoid using up landfill space. Please do your part by keeping this product out of the municipal waste stream! The "wheelie bin" symbol means that it should be collected as "waste electrical and electronic equipment". You can return an old product to your retailer when you buy a similar new one. For other options, please contact your local council.



**To obtain service on your product,  
Please contact Kids Station Toys at  
1888-321-7191, or  
email at [service@kidsstationtoys.com](mailto:service@kidsstationtoys.com)**

FISHER-PRICE and associated trademarks are owned by Mattel and used under license from Mattel Europa B.V.  
©2018 Mattel. All Rights Reserved. **MADE IN CHINA.** FISHER-PRICE ainsi que les marques et les logos afférents  
appartiennent à Mattel Europa B.V. et sont utilisés sous licence. ©2018 Mattel. Tous droits réservés.  
**FABRIQUÉ EN/AUX/AU/À CHINE.** Marcas registradas utilizadas bajo licencia. Todos los derechos reservados.  
**HECHO EN CHINA.**

Manufactured for and distributed by  
Kids Station Toys Incorporated  
P.O. BOX 694660 MIAMI, FLORIDA 33269-4660

KFP2748-BT-E0GU1-A0US  
PRINTED IN CHINA