



ALPHABET AND NUMBERS BUS



OWNER'S MANUAL

PLEASE READ BEFORE OPERATING THIS EQUIPMENT

Model: KS3719

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

ICES: This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

LOCATION OF CONTROLS

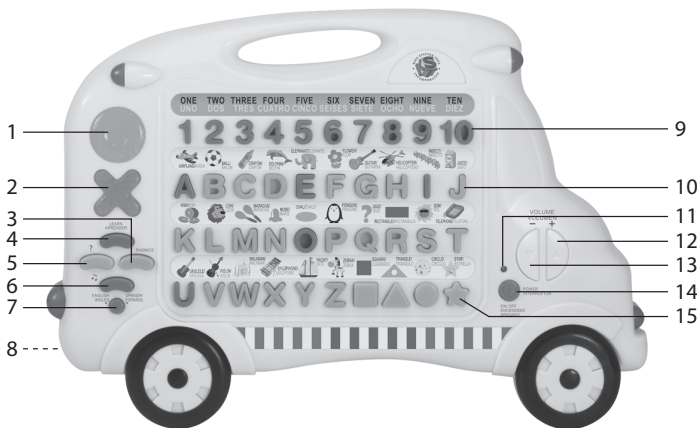


- | | |
|--|-------------------------|
| 1. Correct Answer Indicator | 9. Number Keys |
| 2. Incorrect Answer Indicator | 10. Letter Keys |
| 3. Learn About Phonics Button | 11. Power Indicator |
| 4. Learn About Letters Button | 12. Volume Up Button |
| 5. Quiz Button | 13. Volume Down Button |
| 6. Music Button | 14. Power ON/OFF Button |
| 7. Language Button | 15. Shape Keys |
| 8. Battery Compartment
(rear of unit) | |

INSTALLING THE BATTERIES

Adult Installation Required

1. Open the battery compartment door on the bottom of unit by removing the screw with a screwdriver and lift up.
2. Insert three (3) "AA" size batteries (included) following the polarity diagram in the compartment.
3. Replace the battery compartment door and screw.

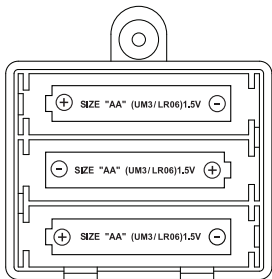

IMPORTANT BATTERY INFORMATION

CAUTION: As with all batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths.

If swallowed, promptly seek medical attention at the nearest doctor or hospital, and have them call the poison control center immediately.

Make sure batteries are inserted properly and follow all toy and battery manufacturer's instructions.

- Battery installation should be done only by an adult.
- When replacing batteries, replace all batteries at the same time.
- Do not mix old and new batteries.
- Do not mix alkaline, standard or rechargeable batteries.
- Do not dispose of used batteries in a fire. This could cause the batteries to explode.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged by an adult or under adult supervision (if removable).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity – refer to battery installation diagram for proper position. Always install the batteries correctly according to the positive (+) and negative (-) signs on the batteries
- Exhausted batteries are to be removed from the toy and disposed of in accordance with local regulations.
- The supply terminals are not to be short-circuited.
- Replace batteries at the first sign of erratic operation.

Auto Power Off

To preserve the battery power, when no buttons have been pressed for three minutes, the unit will automatically turn off. The unit can be turned back on again by pressing any button.

OPERATION

1. Press the Power ON/OFF button to the ON position to turn the unit on; the Power indicator will light.
2. Press the Language button to select the desired language.
3. Adjust the volume as desired using the Volume Up/Down buttons.
4. Press one of the Mode buttons as follows to play the respective game:

Learn About Letters (Numbers/Shapes): Press any Letter key to learn the letter and hear a corresponding word starting with this letter.

Press any Number key to learn the number and how to count to the number.

Press any Shape key to hear the Shape's name.

Learn About Phonics: Press any Letter Key to hear the phonic of the letter.

Quiz: After the unit asks a question, select the answer using the Letter, Number or Shape keys. If you are correct, the Correct Answer indicator will light. If you are incorrect, the Incorrect Answer indicator will light.

Music: Press this button to hear three melodies. Press one of the Letter, Number or Shape keys to hear the respective musical note.

5. When finished, press the Power ON/OFF button to the OFF position to turn the unit off; the Power indicator will turn off.

NOTE: If the unit does not work properly, turn the unit off, remove the batteries and wait a few minutes. Reinsert batteries. If the unit still does not work properly, install fresh batteries.

	English	French	Spanish
1	One	Un	Uno
2	Two	Deux	Dos
3	Three	Trois	Tres
4	Four	Quatre	Cuatro
5	Five	Cinq	Cinco
6	Six	Six	Seis
7	Seven	Sept	Siete
8	Eight	Huit	Ocho
9	Nine	Neuf	Nueve
10	ten	dix	diez
A	airplane	avion	avión
B	ball	ballon	balón
C	crayon	crayon	crayón
D	dolphin	dauphin	delfín
E	elephant	éléphant	elefante
F	flower	fleur	flor
G	guitar	guitare	guitarra
H	helicopter	hélicoptère	helicóptero
I	insect	insecte	insecto
J	juice	jus	jugo
K	kiwi	kiwi	kiwi
L	lion	lion	león
M	maracas	maracas	maracas
N	nose	nez	nariz
O	oval	ovale	óvalo
P	penguin	pingouin	pingüino
Q	quiz	quiz	quiz
R	rectangle	rectangle	rectángulo
S	sun	soleil	sol
T	telephone	téléphone	teléfono
U	ukulele	ukuléle	ukulele
V	violin	violon	violín
W	walkman	walkman	walkman
X	xylophone	xylophone	xilófono
Y	yacht	yacht	yate
Z	zebra	zèbre	zebra
▲	triangle	triangle	triángulo
■	square	carré	cuadrado
●	circle	cercle	círculo
★	star	étoile	estrella