 




OWNER'S MANUAL

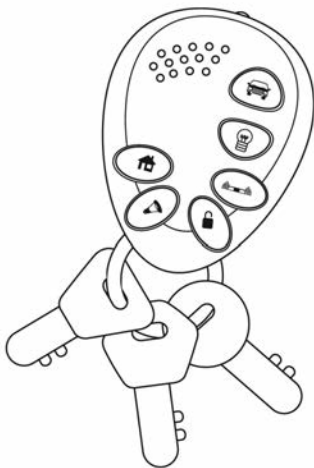

PLAY CAR KEYS

PLEASE READ BEFORE OPERATING THIS EQUIPMENT

Model: KS3720B

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)


ICES: This Class B digital apparatus complies with Canadian ICES-003.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

INSTALLING THE BATTERIES

Adult Installation Required

1. Open the battery compartment door on the bottom of unit by removing the screw with a screwdriver (not included) and lift up.
2. Insert two (2) 1.5 "AAA" size batteries (included) following the polarity marked inside the battery compartment.
3. Replace the battery compartment door and screw.

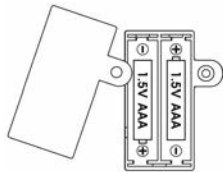


BATTERY PRECAUTIONS:

CAUTION: As with all batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If swallowed, promptly seek medical attention at the nearest doctor or hospital, and have them call the poison control center immediately. Make sure batteries are inserted properly and follow all toy and battery manufacturer's instructions.

- Battery installation should be done only by an adult.
 - When replacing batteries, replace all batteries at the same time.
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard or rechargeable batteries.
 - Do not dispose of used batteries in a fire. This could cause the batteries to explode.
 - Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are only to be charged by an adult or under adult supervision (if removable).
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Batteries are to be inserted with the correct polarity – refer to battery installation diagram for proper position. Always install the batteries correctly according to the positive (+) and negative (-) signs on the batteries
 - Exhausted batteries are to be removed from the toy and disposed of in accordance with local regulations.
 - The supply terminals are not to be short-circuited.
 - Replace batteries at the first sign of erratic operation.
-
- Rechargeable batteries are to be removed from the toy before being charged,
 - Rechargeable batteries are only to be charged under adult supervision,
 - The supply terminals are not to be short-circuited.

LOCATION OF CONTROLS

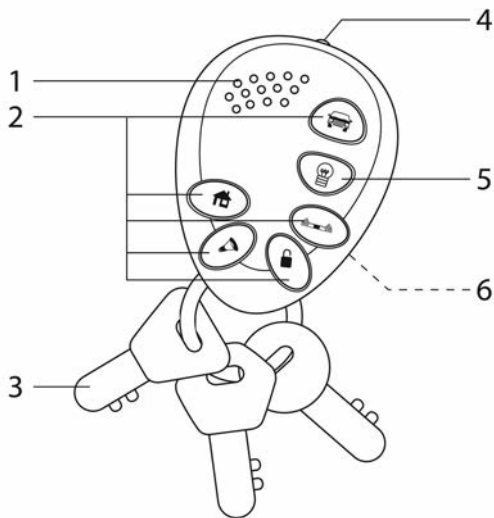

1. Speaker
2. Sound Effect Buttons
3. Keys
4. Light Bulb
5. Flashlight Button
6. Battery Compartment (Rear)

OPERATION

Product Features

1. To turn ON the light, press and hold the flashlight button.
To turn OFF, release the button.
2. Press “Sound Effect” buttons to hear Doorbell / Car Lock / Ignition Start / Cars’s Horn / Alarm Sounds.

Care and Maintenance

1. Keep the unit clean by wiping with a soft dry cloth.
2. Keep the unit away from direct sunlight or excess heat sources.
3. Remove batteries when the unit is not in use for an extended time period.
4. Do not expose the unit to moisture or water and do not drop on hard surface.

Troubleshooting

If improper operation occurs, please follow these steps:

1. Remove all the batteries in the battery compartment.
2. Let the unit stand for a few minutes, then replace the batteries.
3. If the unit still not works, replace with all the batteries with brand new ones.